

2x4 leg should  
engage on tripod  
head here.


3.5" door hinge  
location

Ø12.00

Ø15.00


Ø16.00


Orange circles indicate locations of holes required for 1.25" Forstner bit for Astroblast feet to set inside. Only drill holes partway into plywood (approx 3/8" - 1/2")

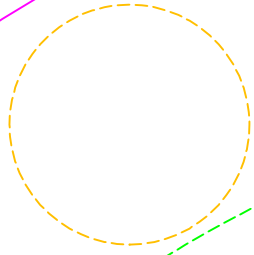

2x4 leg should engage on tripod head here.



3.5" door hinge location

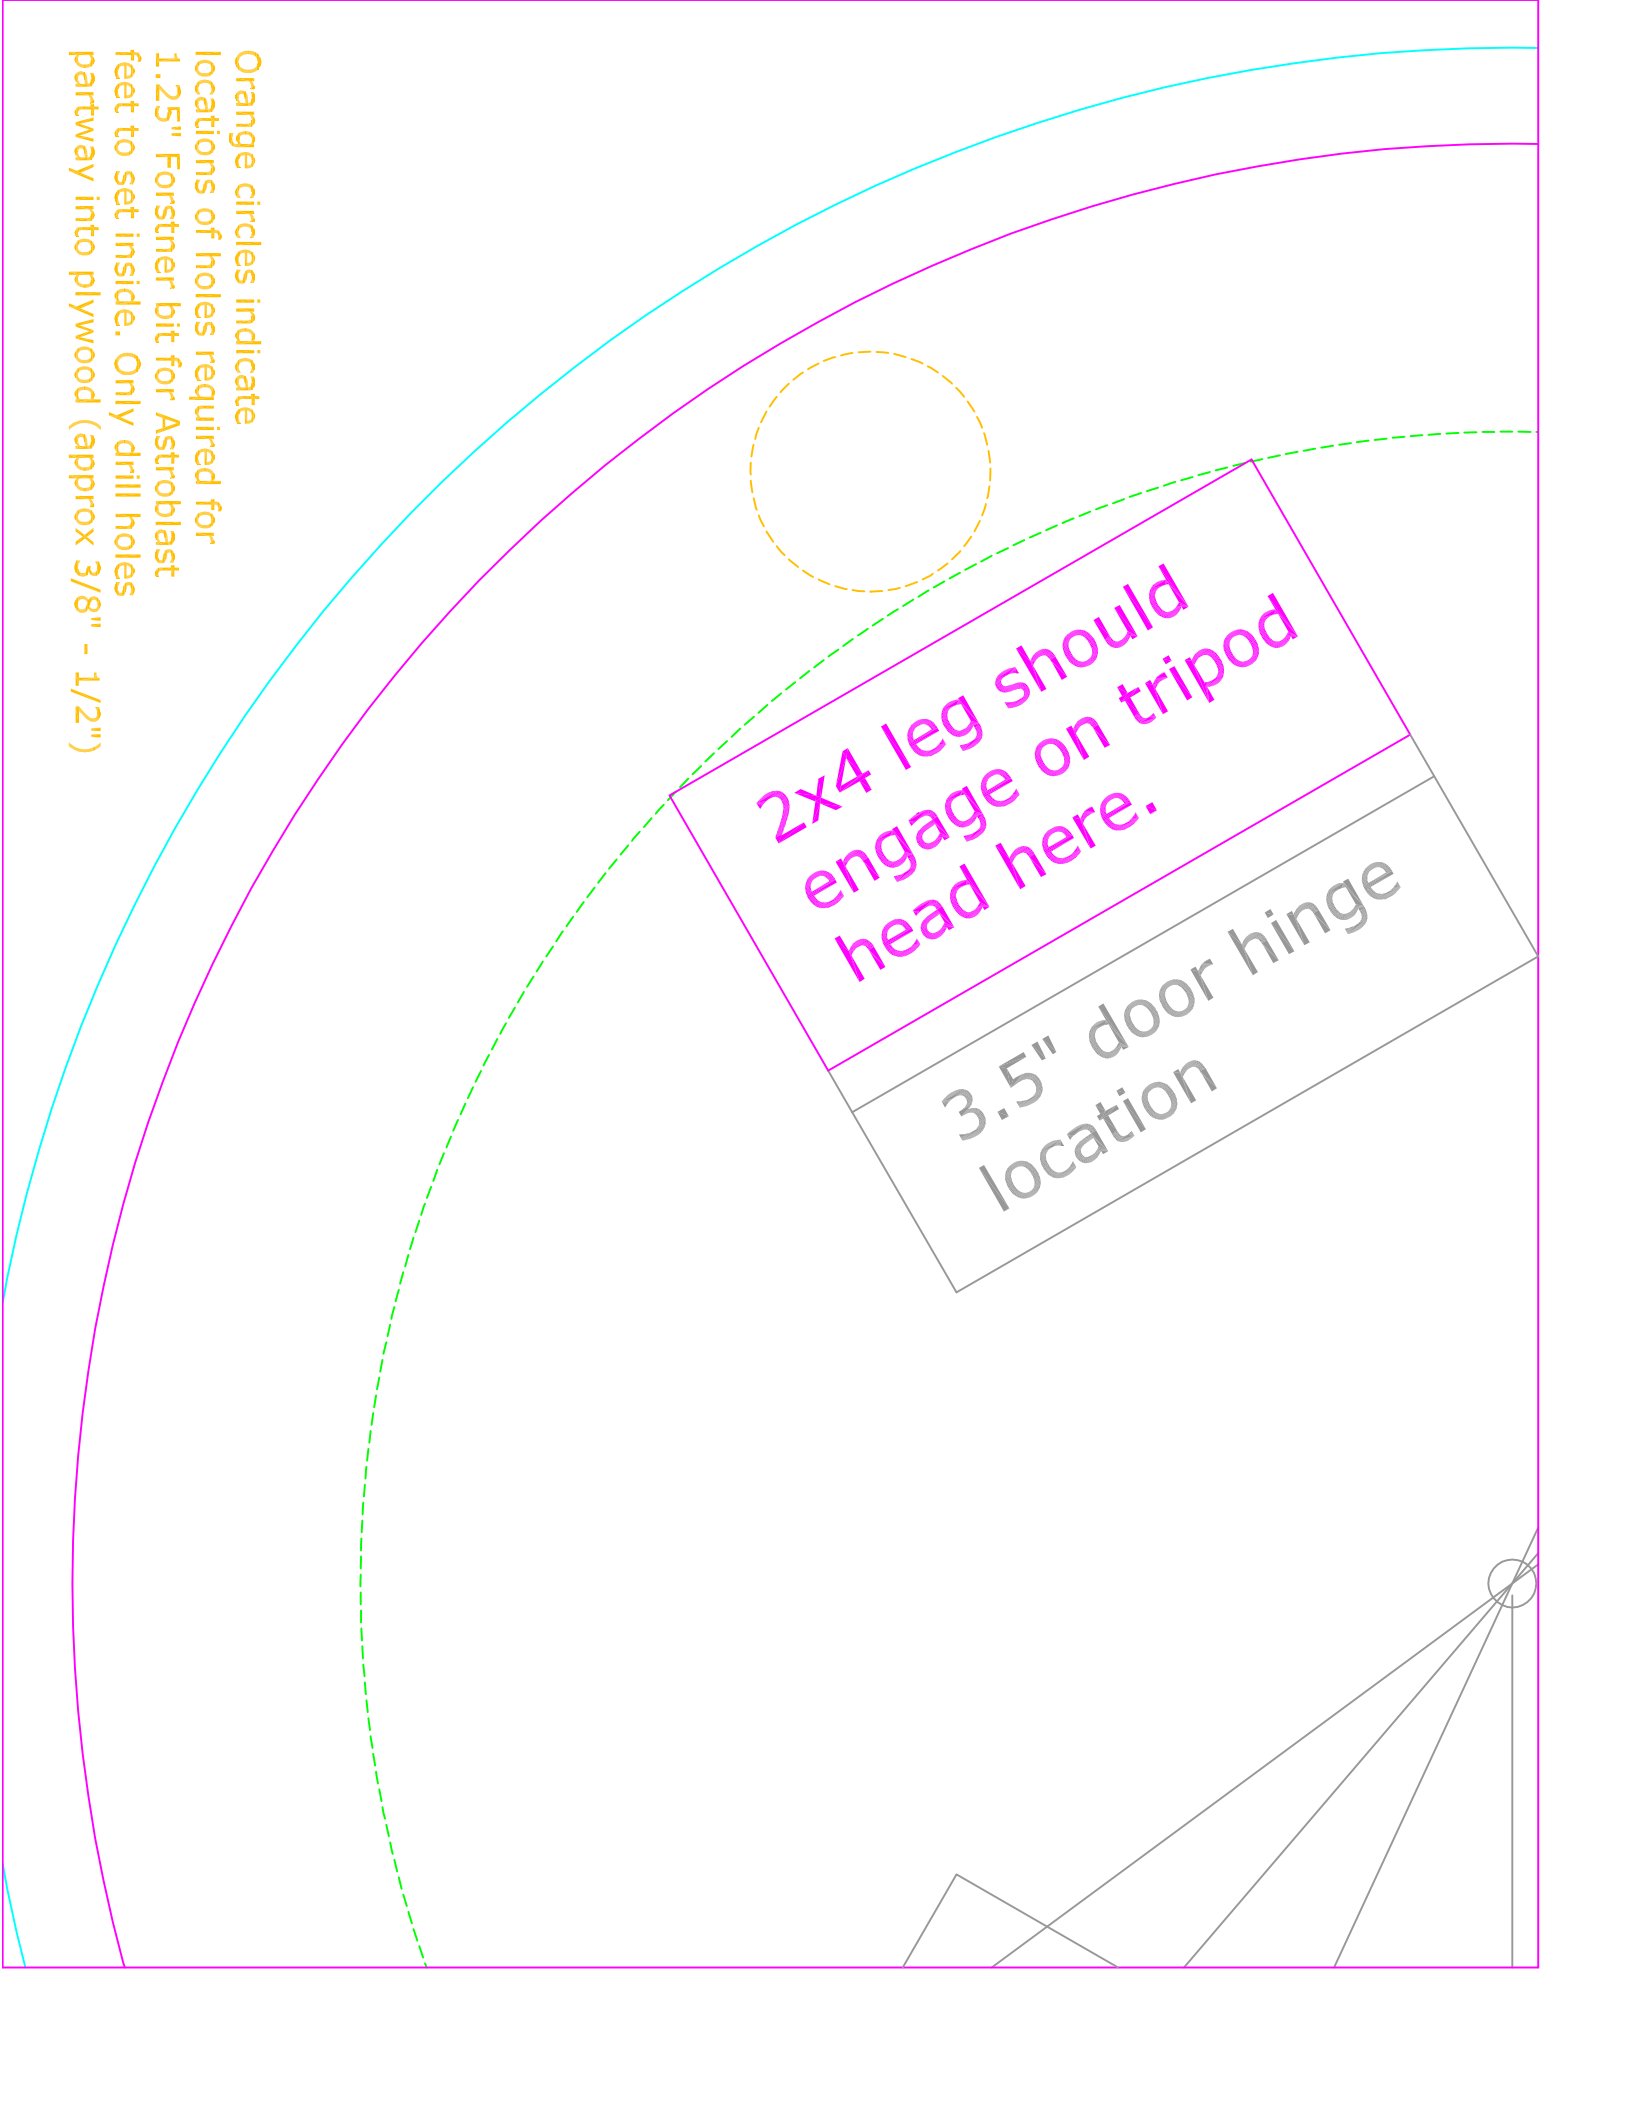

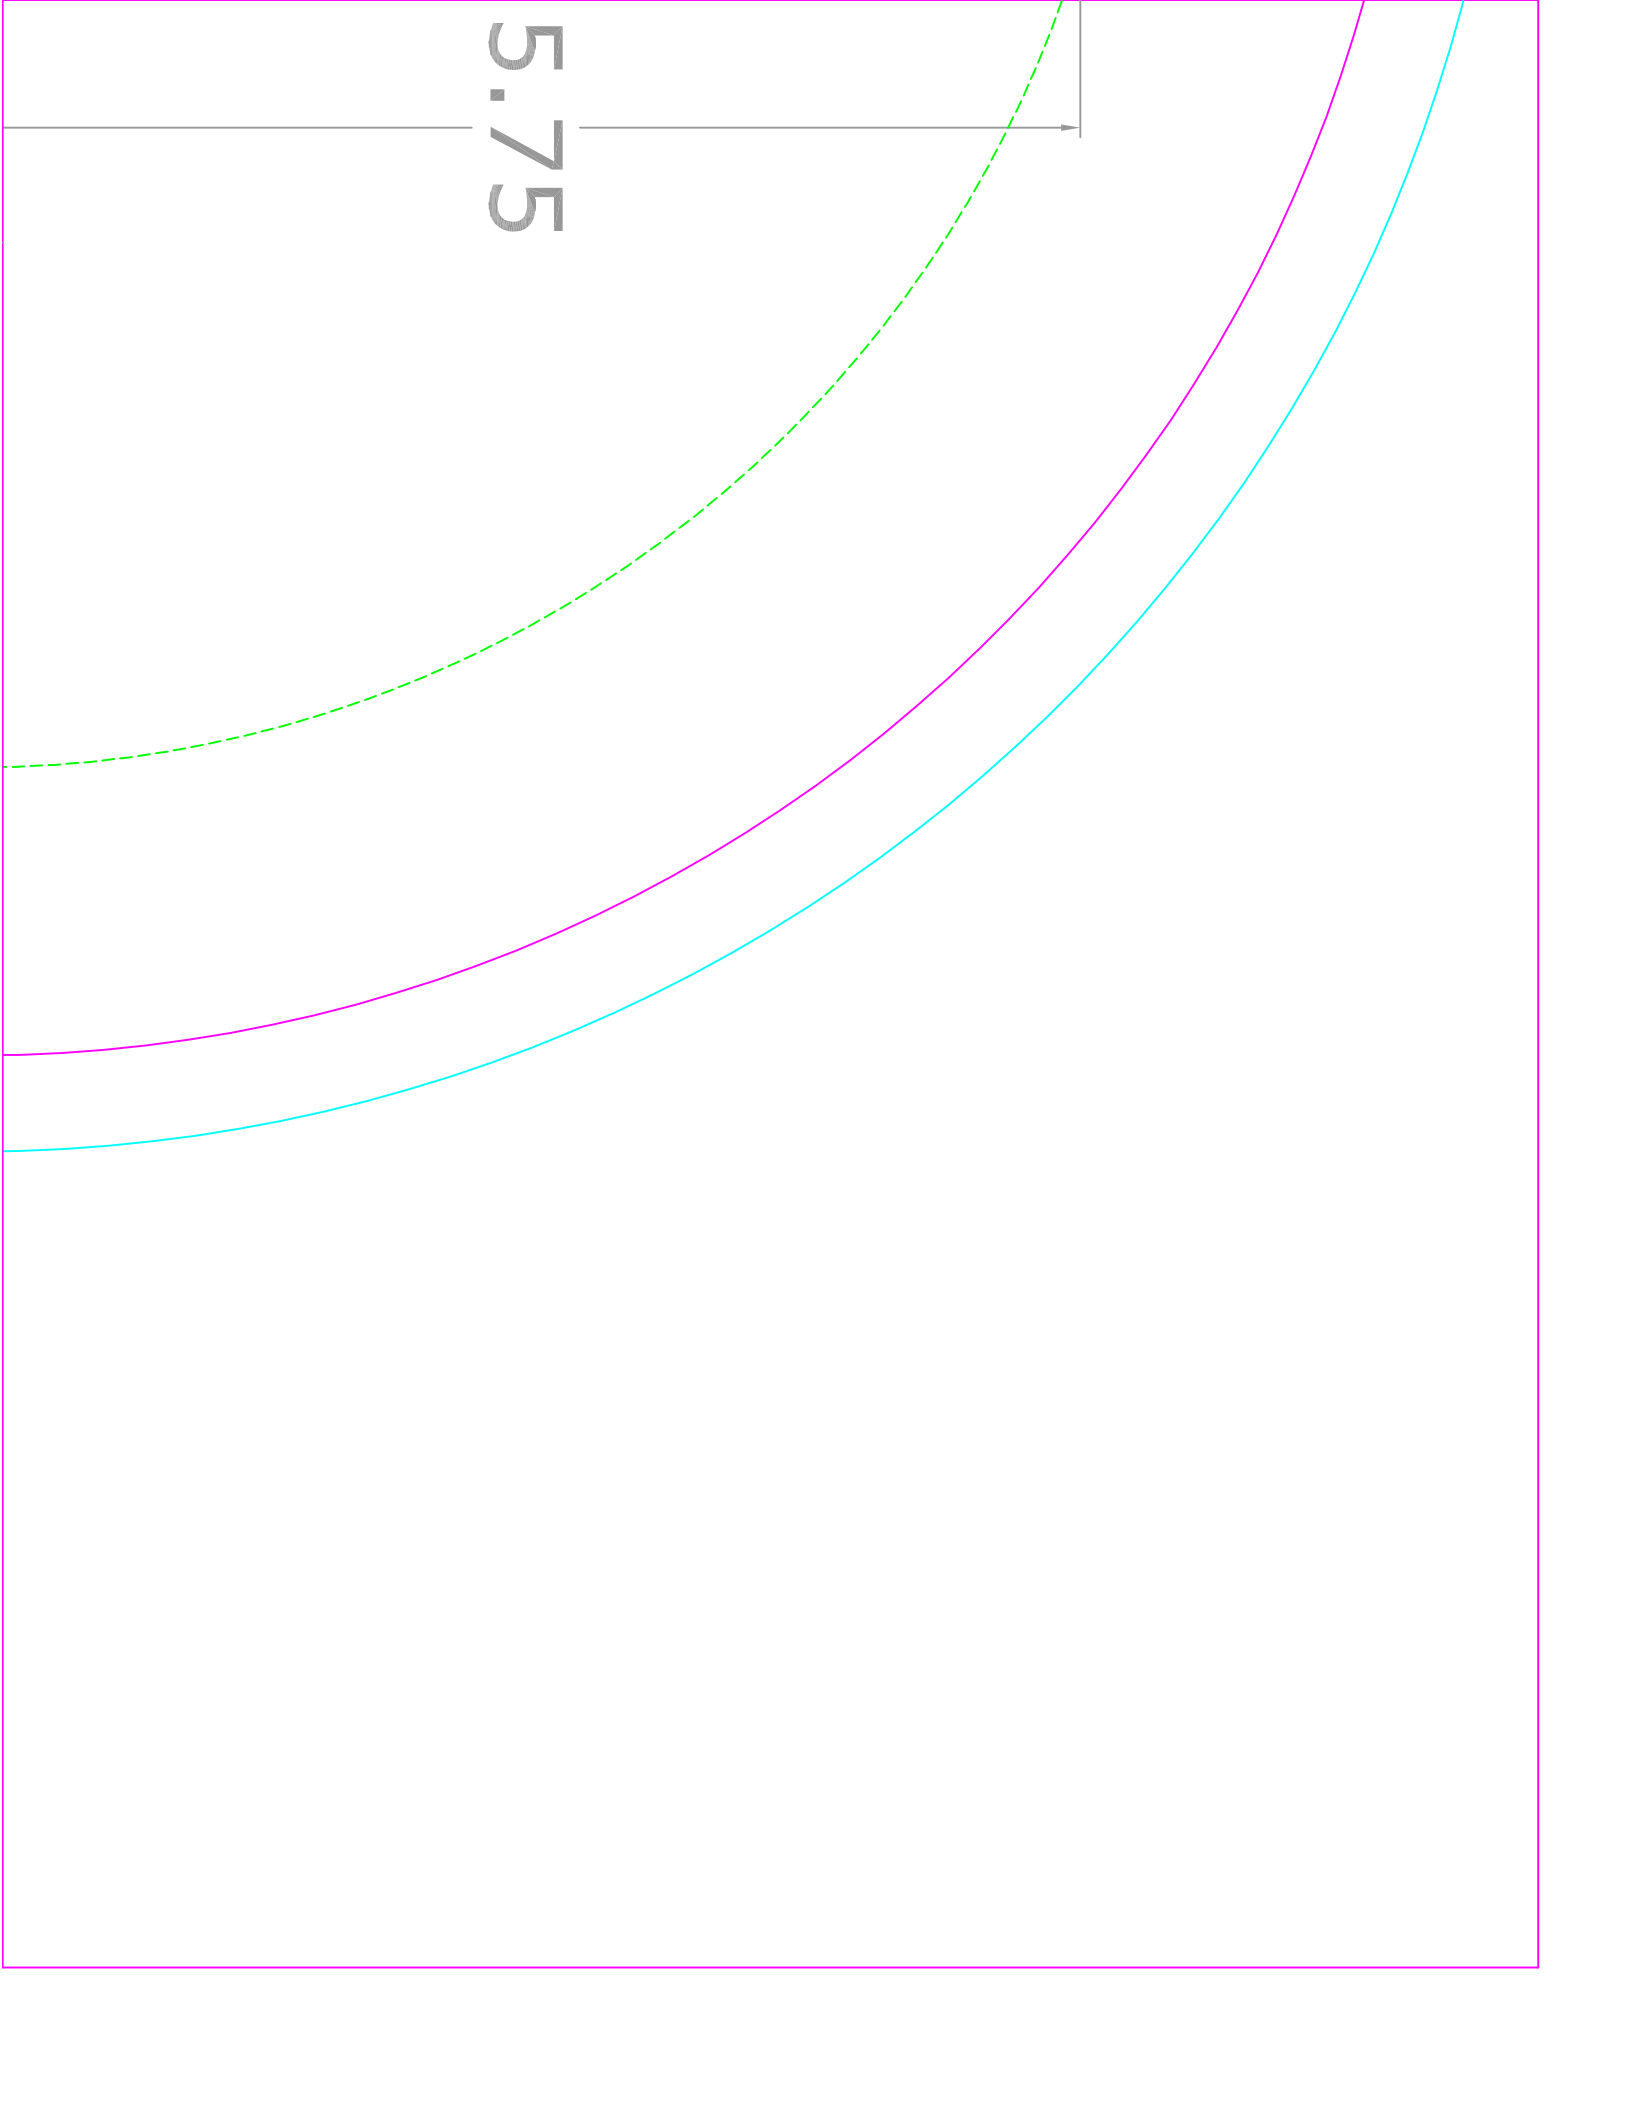

3.5" door hinge  
location

2x4 leg should  
engage on tripod  
head here.

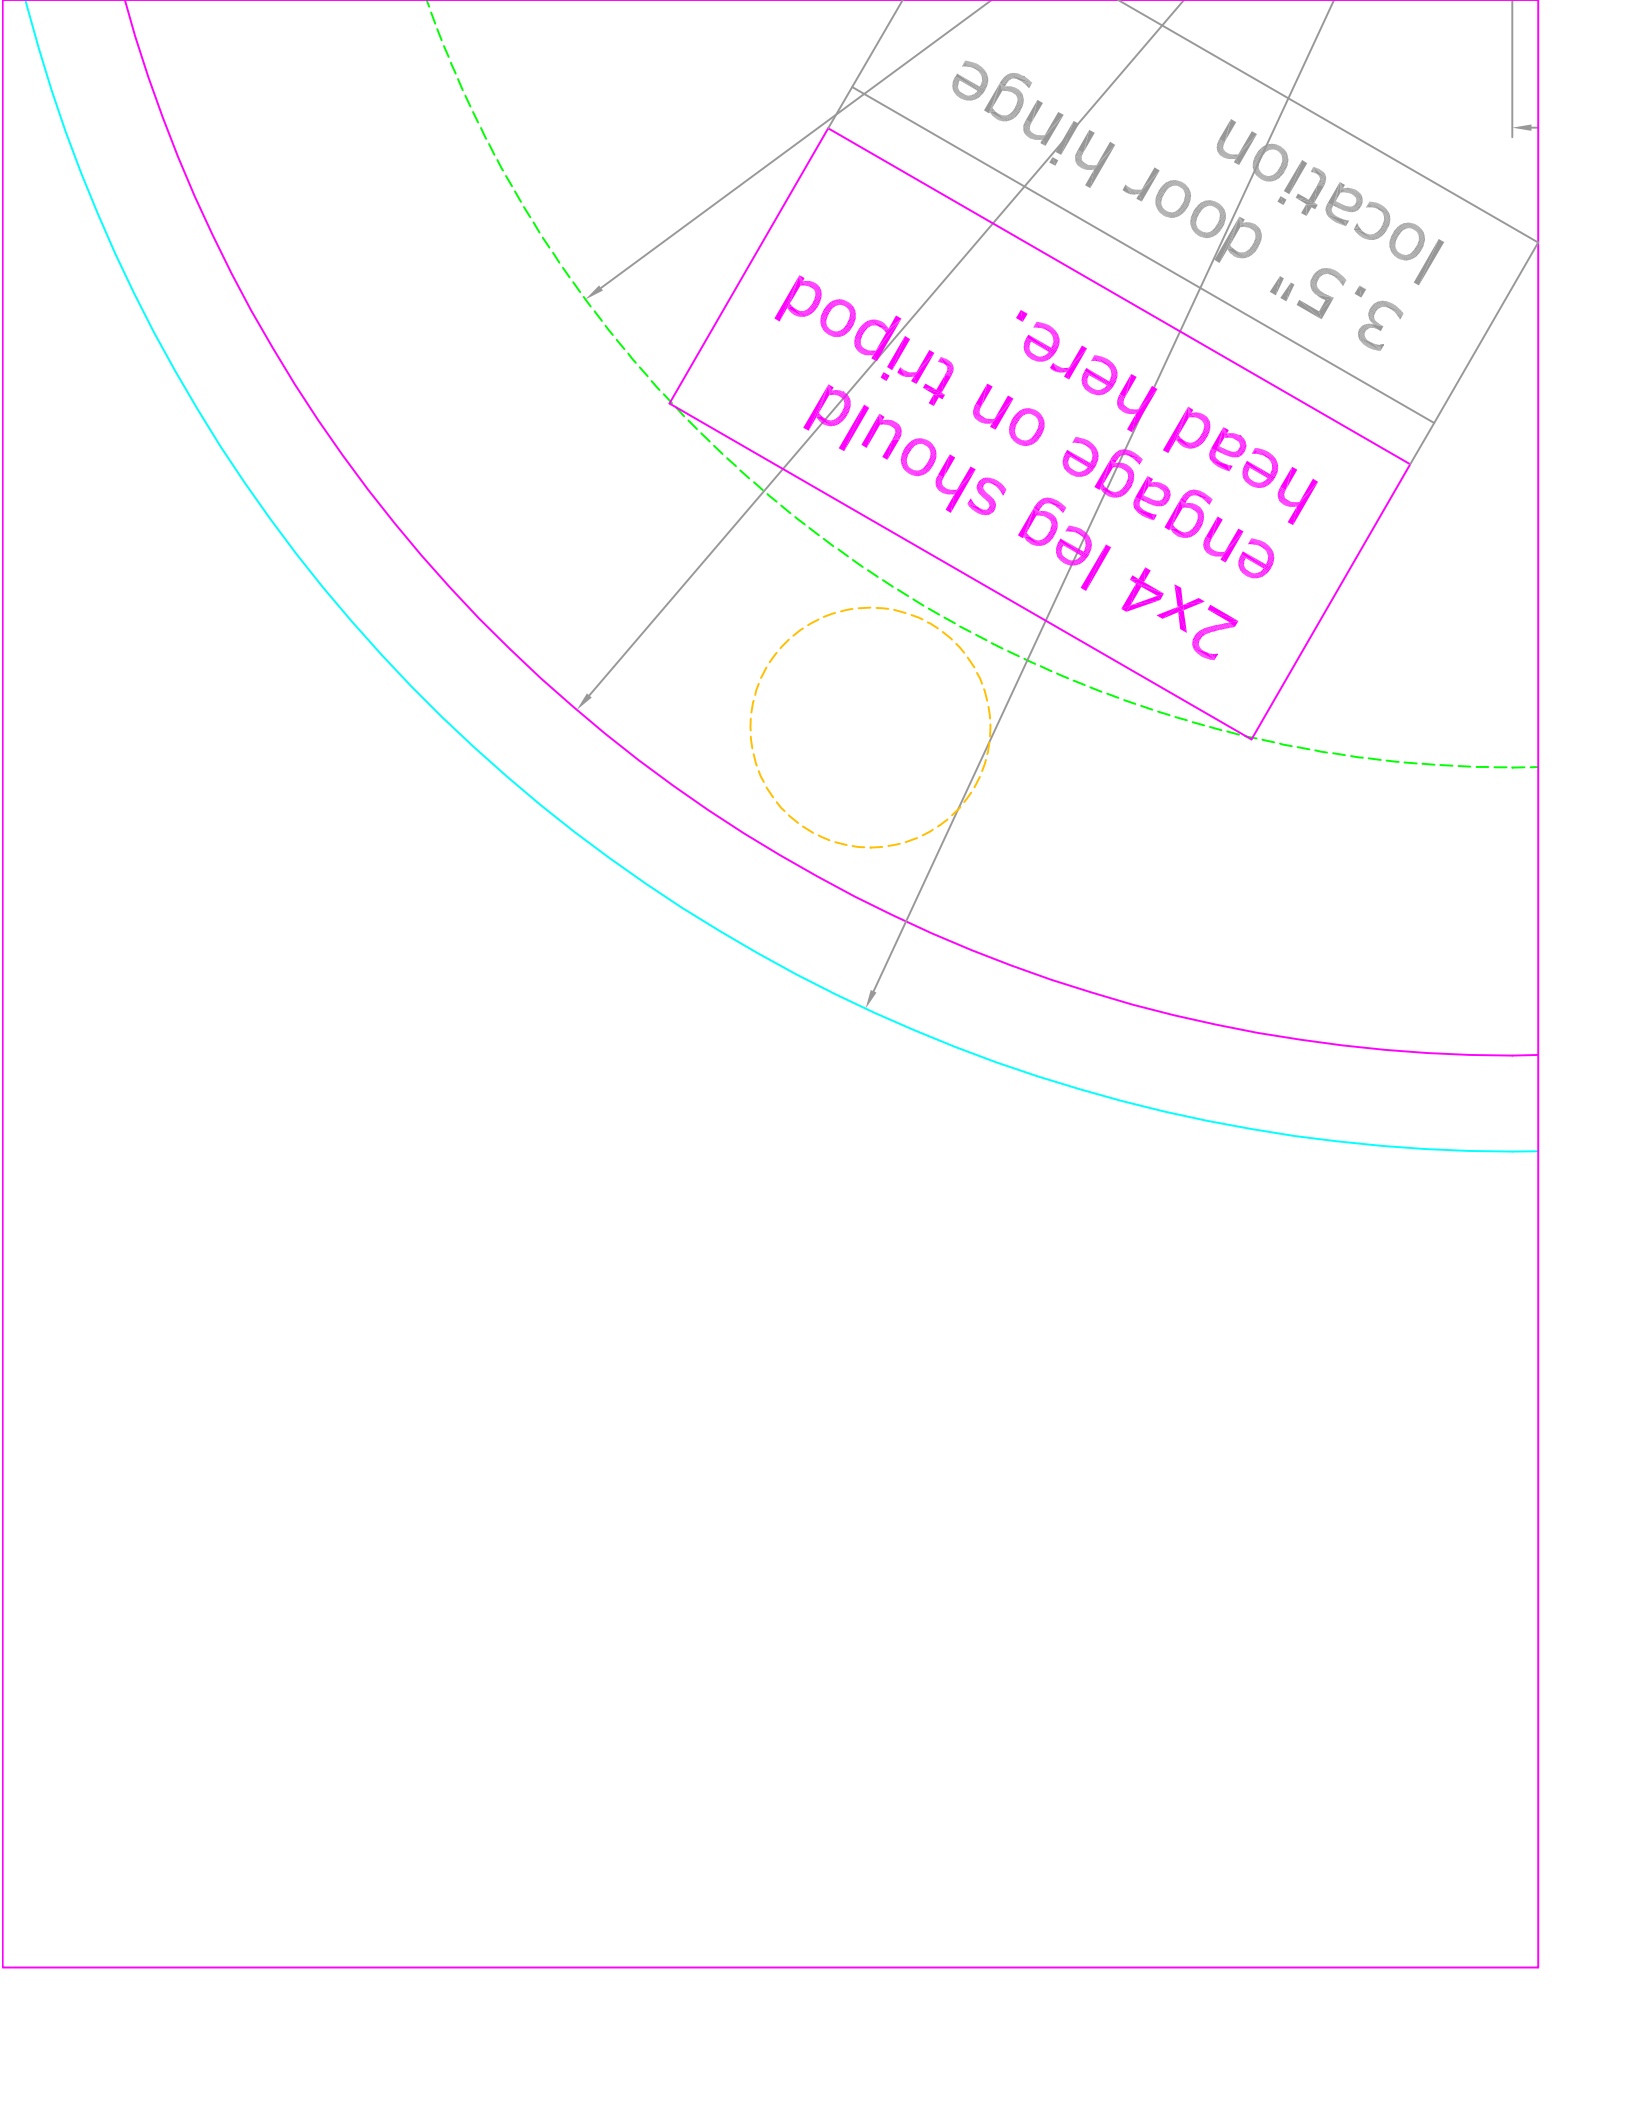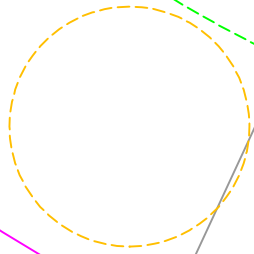

Orange circles indicate locations of holes required for 1.25" Forstner bit for Astroblast feet to set inside. Only drill holes partway into plywood (approx 3/8" - 1/2")

